


Island Trunk System

Revised 18 Oct 2009

The latest Trunk System block diagram includes the most recent additions and changes to the Island Trunk System. It may appear a little more complicated than it actually is. **GREEN** repeaters are normally left connected together via the trunk so what goes in on one is heard on all. **BLUE** repeaters are not permanently connected to the trunk but may be connected at the user's pleasure. Please disconnect after use. **ORANGE** repeaters are a back-up only and are only to be used on demand in the event that the primary repeater has failed. The IRLP node connected to 444.725 in Nanaimo is available to all repeaters on the ITS EXCEPT the repeaters in Chemainus. There is no access code and is available for everyone. Please see our website for latest information www.islandtrunksystem.org

Thanks from the Island Trunk Folks

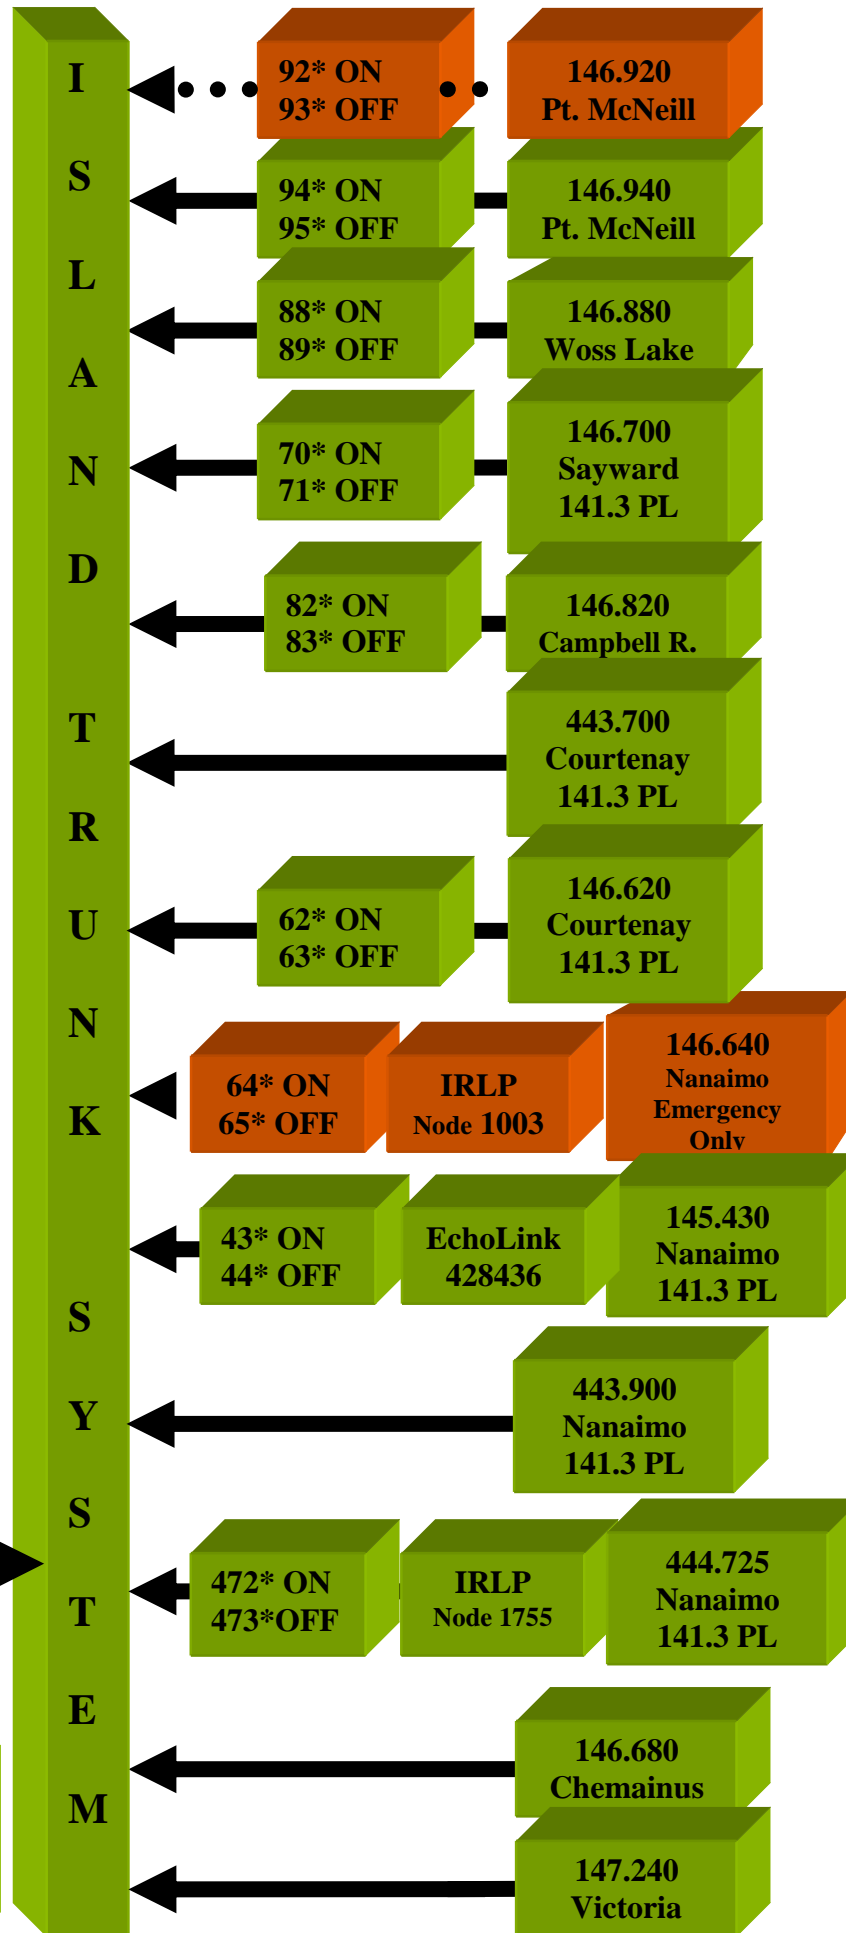

Link Backup Only
Use only as
EMERGENCY

Normally
On Trunk